

## Optimus (XRG90) >> Faultfind

### - Power ON Results

### - SW/HW - Versions **Release 2.3**

This screen displays the actual firmware versions **Release**, **Version** (don't care) and **Level**.  
For the PCB Central Unit it also displays the hardware version (must be **1** for Release 2.x).

CU APPL SW:	[R2V1L3]	4512 114 20823	
CU BOOT SW:	[R2V1L3]	4512 113 20721	
FU kV:	[R2V1L1]	4512 113 20121	
FU mA a:	[R0V1L5]	4512 113 20205	
FU mA b:	[ - - - - - ]		
FU mA c:	[ - - - - - ]		
FU mA d:	[ - - - - - ]		
FU CIE:	[R0V1L1]	4512 113 20301	as standard version
FU HI a:	[R2V1L3]	4512 113 20523	
FU HI b:	[ - - - - - ]		
FU RC a:	[R1V1L2]	4512 113 22312	
FU RC b:	[ - - - - - ]		
FU RC c:	[ - - - - - ]		
FU AD a(1WA):	[R0V1L1]	4512 113 20601	
FU AD b(2WA):	[R0V1L1]	4512 113 20601	
FU AD c(1WB):	[ - - - - - ]		
FU AD d(2WB):	[ - - - - - ]		
FU MDO:	[ - - - - - ]		
CU HW:	[ 1 ]		

### - SW/HW - Versions **Release 3.3**

This screen displays the actual firmware versions **Release**, **Version** (don't care) and **Level**.  
For the PCB Central Unit it also displays the hardware version (must be **2** for Release 3.x).

CU APPL SW:	[R3V1L3]	4512 114 20833	
CU BOOT SW:	[R3V1L1]	4512 113 20731	
FU kV:	[R3V1L2]	4512 113 20132	as an example for Optimus RAD
FU mA a:	[R1V1L2]	4512 113 20212	
FU mA b:	[ - - - - - ]		
FU mA c:	[ - - - - - ]		
FU mA d:	[ - - - - - ]		
FU CIE:	[R1V1L1]	4512 113 20311	as standard version
FU HI a:	[R2V1L4]	4512 113 20524	
FU HI b:	[ - - - - - ]		
FU RC a:	[R2V1L2]	4512 113 22322	
FU RC b:	[ - - - - - ]		
FU RC c:	[ - - - - - ]		
FU AD a(1WA):	[R1V1L1]	4512 113 20611	
FU AD b(2WA):	[R1V1L1]	4512 113 20611	
FU AD c(1WB):	[R1V1L1]	4512 113 20611	
FU AD d(2WB):	[ - - - - - ]		
FU MDO:	[ - - - - - ]		
CU HW:	[ 2 ]		